

Evaluation Kit for E-Paper Display







Product Specifications



Customer	Standard			
Description	Evaluation Kit For E-paper Display			
Model Name	DESPI-L(CO2)			
Date	2022/06/01			
Revision	1.0			

D	esign Engineerin	Ig
Approval	Check	Design
宝刘 印玉	燕修 印凤	之吴良

Zhongnan Building, No.18, Zhonghua West ST, Ganjingzi DST, Dalian, CHINA

Tel: +86-411-84619565

Email: info@good-display.com

Website: www.good-display.com

Contents

1.	Overview	4
2.	Mechanical Specifications	4
3.	Functions	5
4.	Connection Mode and RESE Selection	7
5.	Program Downloading 1	.0

1.0verview

DESPI-L (C02) evaluation kit is used to help users develop e-paper display projects with provided source code to create more differentiated solutions. It is designed for SPI e-paper display. It supports driving Good Display's black-white e-paper display and three-color (black, white and red/Yellow) e-paper display: 0.97", 1.54",2.13", 2.66", 2.7", 2.9", 3.71", 4.2", 5.83" and 7.5". And it is added the functions of USB serial port and LED indicator light, Reset button, user-defined button, font chip, Flash chip and etc. It also supports being updated via computer software directly.

DESPI-L (C02) evaluation kit consists of motherboard DESPI-M02L and connector board DESPI-C02.

Parameter	Specification
Model	DESPI-L (C02)
Platform	STM32
Dimension	Mother Board: 90mm x 60mm (DESPI-M02L) Adapter: 41mm x 22mm (DESPI-C02)
Power Interface	Туре-С
Example Code	Available
Operating Temp.	-20 ℃ ~ 70 ℃
Main Function	Learn to drive E-paper display; Test and evaluate e-paper display; Support secondary development
Additional Function	Type-C, LED indicator, User-defined button, Reset button, Font chip, Flash chip, Current detection

2. Structure Specification



3. Functions



DESPI-M02L

FPC Interface for E-paper Display

Figure 2 : DESPI-C02

Motherboard



3.1 Power Supply

The input voltage of this board is DC5V, which is powered by the Type-C port.

3.2 USB to serial port transmission

This board has USB to serial port transmission function. Please install the driver program CH340 to use it.

3.3 P3 and P12 short-circuit jumper

1) P3: P3 short-circuit jumper controls DESPI-C02's power supply, which is e-paper's power supply.

2) P12: P12 short-circuit jumper is used to select the download mode. You need to connect it when you download a program by UART mode, and remove it after you have downloaded it, otherwise the program will not run. If you connect it, you will not be able to download program by other ways.

3.4 Current measurement

The development kit supports current measurement of DESPI-M02L and DESPI-C02.

1) DESPI-M02L: Power off and make series connection between ampere meter and TEST1.

2) DESPI-C02: Power on and take off the short-circuit jumper P3, then make series connection between ampere meter and TEST2. Put on the short-circuit jumper P3 after measurement.

3.5 I/O port extension

The I/O port of STM32 has been led out for developing.

3.6 LED indicator light

There is a indicator light reserved for developing.

3.7 Key

This board has two buttons, a reset button and a user button for testing and development.

3.8 Expanded Functions

On-board GT30L32S4W font chip for users to mould-take. On-board W25Q16 data storage chip for users to store images and test Data.

4. Connection Mode and RESE Selection

4.1 Connection between e-paper and development board

1) Connect DESPI-C02 to DESPI-M02L as shown in Figure 3. Connect e-paper FPC to DESPI-C02 as shown in Figure 4. (Pay attention to the direction of the e-paper.)



Figure 3 : Connection between DESPI-M02L and DESPI-C02

2) Insert the e-paper display face up into the adapter board

Note: The mirror side of the e-paper is facing down and the display side is facing up.



Figure 4 Schematic diagram of e-paper and adapter board plugging





Figure 5 : Connection between DESPI-C02 and e-paper

4.2 RESE resistor selection of DESPI-C02

The switch on DESPI-C02 is used to select the RESE resistor, different e-papers need to match different RESE resistors, a wrong RESE resistor will cause the e-paper cannot be refreshed.

Note: when designing the actual product, users should strictly follow the circuit in the electronic paper product specification.

1) When RESE is set to 0.47 : Applicable to ULTRACHIP series driver ICs (starting with UC), fitipower series driver ICs (starting with JD)

1.54 inch GDEW0154T8D、GDEW0154I9FD、GDEW0154M09、GDEW0154M10
 2.13 inch: GDEW0213T5D、GDEW0213I5FD、GDEW0213M21
 2.6 inch: GDEW026M01
 2.7 inch: GDEW027W3
 2.9 inch: GDEW029M06、GDEW029Z13
 3.71 inch: GDEW0371W7、GDEY037T03、GDEY037Z03
 4.2 inch: GDEW042T2、GDEQ042Z21
 5.83 inch: GDEW0583T8、GDEW0583Z83
 7.5 inch: GDEY075T7、GDEY075Z08

2) When RESE is set to 3: Applicable to Solomon series driver ICs (starting with SSD)

1.54 inch: GDEY0154D67、GDEY0154D90LT、GDEY0154Z90、GDEY0154T94

2.13 inch: GDEY213B74、GDEY213B75、GDEY0213D32LT

2.66 inch: GDEY0266T90、GDEY0266Z90

2.7 inch: GDEY027T91

2.9 inch: GDEY029T94

4.2 inch: GDEY042T91

5. Program Downloading

This development board supports three ways downloading program. They are JTAG, SWD and UART. JTAG and SWD is recommended, because these two can make online downloading available for debug.

5.1 JTAG

We need to use J-link simulator and Keil4, the operation steps are as follows:

1) Connect the simulator to DESPI-M02's JTAG interface (align the raised part of the figure 6 simulator interface to the notch direction of the JTAG interface) and connect the computer USB port at the other end.



Figure 6 : Connection between JTAG and simulator

2) Open the "mdk.uvproj" in the program folder "Project" shown in Figure 7 with Keil4.

件(F) 编辑(E) 查看(V)	工具(T) 帮助(H)						
LL织 ▼ □ 打开	新建文件夹				• ==		(
🚖 收藏夹	名称	修改日期	类型	大小			
🚺 下载	Debug	2018/5/25 10:59	文件夹				
■ 桌面	JLink Regs CM3	2015/7/10 10:26	文本文档	1 KB			
9月 最近访问的位置	JLinkArm_mdk	2011/7/21 16:16	配置设置	1 KB		· . (
2345下载] JLinkLog	2018/9/6 9:47	文本文档	132 KB			
20401.30	JLinkSettings	2015/5/6 13:38	配置设置	1 KB			
	mdk.opt.bak	2014/2/23 14:30	BAK 文件	5 KB			
	mdk.Uv2.bak	2013/9/25 12:58	BAK 文件	4 KB			
11 视频	mdk.uvgui.Administrator	2018/9/6 9:47	改日期 类型 大小 18/5/25 10:59 文件夹 15/7/10 10:26 文本文档 1 KB 11/7/21 16:16 配置设置 1 KB 13/9/25 12:58 BAK 文件 5 KB 13/9/25 12:58 BAK 文件 136 KB 18/9/6 9:47 ADMINISTRATO 136 KB 18/9/6 9:47 UVOPT 文件 19 KB 18/9/6 9:46 DED 文件 14 KB 18/9/6 9:46 DED 文件 14 KB 13/1/21 12:24 BAK 文件 5 KB 13/9/25 12:40 BAK 文件 4 KB 16/7/13 11:42 BAK 文件 19 KB 16/19/14 14:19 BAK 文件 18 KB				
■ 图片	mdk.uvgui_Administrator.bak	2018/9/6 9:18	BAK 文件	136 KB			
2 文档	mdk.uvopt	2018/9/6 9:47	UVOPT 文件	19 KB			
∂ 音乐	mdk.uvproj	2016/10/25 16:50	UVPROJ 文件	18 KB			
	mdk mdk dep	2018/9/6 9:46	DEP 文件	14 KB			
🖏 家庭组	mdk_Opt.Bak	2013/11/21 12:24	BAK 文件	5 KB			
	🗋 mdk Uv2 Bak	2013/9/25 12:40	BAK 文任	4 KB	J		
■ 计算机	mdk_uvopt.bak	2016/7/13 11:42	BAK 文件	19 KB			
🏭 Win7 (C:)	📄 mdk_uvproj.bak	2016/4/19 14:19	BAK 文件	18 KB			
👝 软件 (D:)							
□ 文档 (E;) ▼							

Figure 7 : Open the mdk.uvproj



3) The Keil4 toolbar is shown in Figure 8. Please click 🔊 at the first time using the simulator and a box like Figure 9 will pop up. Choose the simulator model of yours in the "Debug" bar, and click "OK" to confirm.



Figure 9 : Choose the simulator model

4)Click Ap 29demo.h in Figure 10 to change the image data that needs to be displayed (the image data needs to be achieved by image2lcd).



Figure 1 0 : change the image data

in the toolbar in Figure 8 to compile. 5)Click 6)Click

💵 in the toolbar in Figure 8 to download.



5.2 SWD

We need to use ST-link simulator and Keil4, the operation steps are as follows: 1) As shown in figure 11, DESPI-M02L has a 4-wire SWD interface, which can be connected to the simulator interface by 4 wires and then connect the simulator to the computer.



Figure 11 : SWD interface

2) Download program with Keil4 by the same steps with JTAG.

5.3 UART

This development board supports USB to serial port download, which need to use Micro USB data cable, CH340 driver and FlyMcu download tool, the operation steps are as follows:

1) We need to install the CH340 driver on the computer before downloading for the first time.

2) Connect the USB port of DESPI-M02L to the computer with USB data cable.

3) Connect P12 with a short-circuit jumper, the position of P12 is shown in Figure 12.



Figure 12 : The position of P12

Tips: When downloading a program with UART, P12 must be shorted. And the short-circuit jumper must be removed after downloading, otherwise the program cannot run.



4) Open the FlyMcu downloading tool and configure it as shown in Figure 13.

Nout	ge EnumPort Port:COM2->	COM3 bps:115200	www.mcuisp.com,Programm	er
Code File For Online ISP				
C:\Users\Administrator\Desl	ktop/Debug/obj/mdk.hex		ito Reload Before Program	
HandHeld eLoader STM ISP Start ISP(P) Read ChipInfo(R) Era Option Bytes: Program OptionBytes wh Setting(OptionBytes)	Free STM IAP NXP ISP EP968	<u>RS232</u>		

Figure 13 : Configuration of FlyMcu

5) Click "Search Serial Port", choose the COM port corresponding to the board, "bps" choose "115200".

6) Choose the program file with the file path: Project > Debug >obj > mdk.hex.

7) Click "Start ISP" to download.



₹ 机下载时的程序 δ:\程序\DIS \G-0	文件: DEY02138	- 374-210419\OE	J\EPD.hex	(]		☑编程前重	装文件			
F持万用编程器 开始编 读器件信息(R) 选项字节区: □编程到FLASH(设定选项字	STMISP 程(P) 清 清 時 時 時	免费STMIAP	NXP ISP 后执行 RamIsp 饶录模式 读r	EP968_RS232	2	芯芯开候全DTRT:DTRT开在芯芯读A596120芯芯芯第共成W创 片片始)方电量延电维站(FIF由EA6135D片片片9413、MW)	RAM容量为65 三不每含此佳 之片擦除(4) 	 535KB(此信息 :息) +揉除時间会! ·12V),复位 ,选择进入Boo ·12V)释放复位 ·12V)释放复合 ·12V)释放复合 ·12V)释放复合 ·12V)释放复合 ·12V, ** ·12V, **<	l(仅供参 btLoade: c a、耗时 cxx_Hig) DFF00 l(仅供参 al寝程 要EP9 一切正 術	考,新版本 请耐心等 r 890毫秒 h-densit 考,新版本 68,全球音	

8) When download is complete, remove the short-circuit jumper of P12 and reenergize the board, then the program will run.

9) If you want to change a image, you need to use Keil4 to change the image data (Figure 10), compile it (Figure 8) to generate a new mdk.hex file, and then re-select the file to download it.