

■ 外形及型号

SP11 双内牙弯头



型号	SP11-01A-01A
	SP11-02A-02A
	SP11-03A-03A
	SP11-04A-04A
	SP11-06A-06A

SP12 双内外牙弯头



型号	SP12-01A-01S
	SP12-02A-02S
	SP12-03A-03S
	SP12-04A-04S
	SP12-06A-06S

SP13 快拧直通内牙



型号	SP13-06F-02A	SP13-10F-01A
	SP13-06F-03A	SP13-10F-02A
	SP13-06F-04A	SP13-10F-03A
	SP13-08F-01A	SP13-10F-04A
	SP13-08F-02A	SP13-12F-02A
	SP13-08F-03A	SP13-12F-03A
	SP13-08F-04A	SP13-12F-04A

SP14 快拧直通



型号	SP14-04F
	SP14-06F
	SP14-08F
	SP14-10F
	SP14-12F

SP15 快拧三通



型号	SP15-04F
	SP15-06F
	SP15-08F
	SP15-10F
	SP15-12F

SP16 快拧弯头



型号	SP16-04F
	SP16-06F
	SP16-08F
	SP16-10F
	SP16-12F

SP17 快拧弯头外牙



型号	SP17-06F-01S	SP17-10F-01S
	SP17-06F-02S	SP17-10F-02S
	SP17-06F-03S	SP17-10F-03S
	SP17-06F-04S	SP17-10F-04S
	SP17-08F-01S	SP17-12F-02S
	SP17-08F-02S	SP17-12F-03S
	SP17-08F-03S	SP17-12F-04S
	SP17-08F-04S	

SP18 快拧弯头内牙



型号	SP18-06F-01A	SP18-12F-02A
	SP18-06F-02A	SP18-12F-03A
	SP18-06F-03A	SP18-12F-04A
	SP18-06F-04A	SP18-10F-01A
	SP18-08F-01A	SP18-10F-02A
	SP18-08F-02A	SP18-10F-03A
	SP18-08F-03A	SP18-10F-04A
	SP18-08F-04A	

SP19 快拧直通外牙



型号	SP19-06F-01S	SP19-12F-02S
	SP19-06F-02S	SP19-12F-03S
	SP19-06F-03S	SP19-12F-04S
	SP19-06F-04S	SP19-10F-01S
	SP19-08F-01S	SP19-10F-02S
	SP19-08F-02S	SP19-10F-03S
	SP19-08F-03S	SP19-10F-04S
	SP19-08F-04S	

SP20 快拧三通终端



型号	SP20-06F-01S	SP20-10F-01S
	SP20-06F-02S	SP20-10F-02S
	SP20-06F-03S	SP20-10F-03S
	SP20-06F-04S	SP20-10F-04S
	SP20-08F-01S	SP20-12F-02S
	SP20-08F-02S	SP20-12F-03S
	SP20-08F-03S	SP20-12F-04S
	SP20-08F-04S	

SP28 调速管接头 (插入式直角)



型号	SP28-08F-01S
	SP28-08F-02S

气源处理元件

控制元件

真空元件

检测元件

辅助元件