




vMix-CS120导播切换台 快速安装说明书

1.上电

通过USB线将本产品与主机设备连接，确认USB线与主机连接完成后，打开主机电源，等待主机启动完成后，开机时键位显示彩灯，约10秒后复位显示白灯，（温馨提示：自检过程中请不要进行操作）至此设备上电完成。

2.挂接vMix软件

第一步：打开vMix软件，点击右上角的设置按钮。

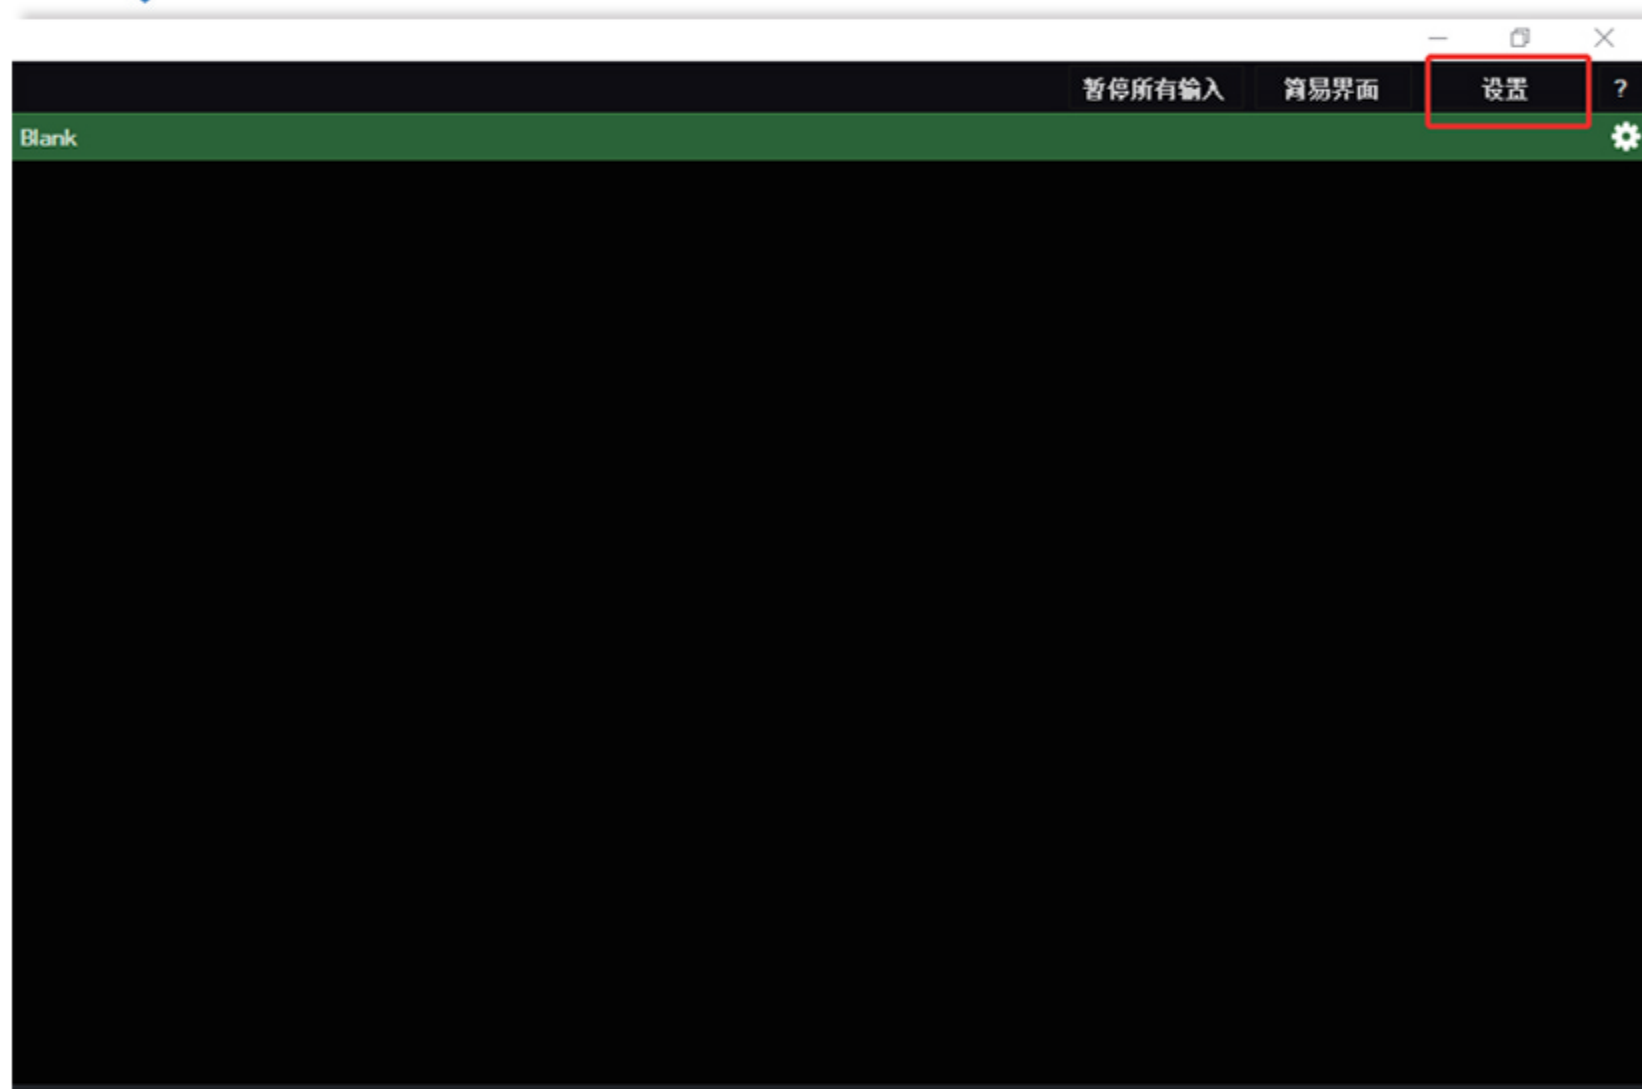

第二步: 快捷键 选择模板 进口导入配置文件 重启软件

Settings

显示
输出/ I / SRT
选项
性能
解码器
录音
外部输出
音频
音频输出
网络控制器
理货灯
快捷键
激活剂
脚本
快讯
关于

进口 出口 默认

所有 键盘 下午 表面 班车PRO 摇杆 找

Key	Function	Duration	Input
<input checked="" type="checkbox"/> PVW1 (1:56)	PreviewInput		1 Input
<input checked="" type="checkbox"/> PVW2 (1:57)	PreviewInput		2 Input
<input checked="" type="checkbox"/> PVW3 (1:58)	PreviewInput		3 Input
<input checked="" type="checkbox"/> PVW4 (1:59)	PreviewInput		4 Input
<input checked="" type="checkbox"/> PVW5 (1:60)	PreviewInput		5 Input
<input checked="" type="checkbox"/> PVW6 (1:61)	PreviewInput		6 Input
<input checked="" type="checkbox"/> PVW7 (1:62)	PreviewInput		7 Input
<input checked="" type="checkbox"/> PVW8 (1:63)	PreviewInput		8 Input
<input checked="" type="checkbox"/> PVW9 (1:64)	PreviewInput		9 Input
<input checked="" type="checkbox"/> PVW10 (1:65)	PreviewInput		10 Input
<input checked="" type="checkbox"/> PVW11 (1:66)	PreviewInput		11 Input
<input checked="" type="checkbox"/> PVW12 (1:67)	PreviewInput		12 Input
<input checked="" type="checkbox"/> PGM1 (1:44)	ActiveInput		1 Input
<input checked="" type="checkbox"/> PGM2 (1:45)	ActiveInput		2 Input
<input checked="" type="checkbox"/> PGM3 (1:46)	ActiveInput		3 Input
<input checked="" type="checkbox"/> PGM4 (1:47)	ActiveInput		4 Input
<input checked="" type="checkbox"/> PGM5 (1:48)	ActiveInput		5 Input
<input checked="" type="checkbox"/> PGM6 (1:49)	ActiveInput		6 Input
<input checked="" type="checkbox"/> PGM7 (1:50)	ActiveInput		7 Input
<input checked="" type="checkbox"/> PGM8 (1:51)	ActiveInput		8 Input
<input checked="" type="checkbox"/> PGM9 (1:52)	ActiveInput		9 Input
<input checked="" type="checkbox"/> PGM10 (1:53)	ActiveInput		10 Input

添加 编辑 克隆 删除 MID设置 模板

显示高级设置 OK 取消

Shortcut Templates

Current 显示为 X-keys / MIDI Note



Audio AKAI APC 40 MK 2
Audio LaunchControl
Default Keyboard
PTZ Joystick - XBOX Controller
PTZ Joystick Pressure Sensitive
Replay JL Cooper ES SloMo
Replay ShuttlePRO v2
Replay X-keys XKE-64
X-keys Video Switcher Kit

0	8	16	24	32	Replay-R Zoom	48	Replay-A: Events3	First	72	80	88	128	96	Audio	104	161	112	120
1	9	17	25	33	RE-PalyS Wipe	49	PGM6 -A: Events4	PVW10	Restar	81	89	132	97	105	TITLE2	113	121	129
2	10	18	26	34	RE-Chan Slide	50	Replay-B MoveEve	PVW11 re	PlayPaus	104	90	136	98	106	WIDE2	114	122	130
3	11	19	27	35	LIVE Pau Stinger1	51	PGM8 -B: PVW4	6: PVW12 e: Prev	83	108	91	140	99	107	PTZHOME	115	123	131
4	12	20	28	36	Mix LSCR PGM1	52	PGM9 -B: CopyEve	TAKE	Next	84	112	92	144	100		116	124	132
5	13	21	29	37	STAREX1 CUT 2	53	Replay-B: Events8	PalyNext	RE-recSt	116	93	148	101	155	109	117	125	133
6	14	22	30	38	Wipe	54	Replay-A: Events1	PVW7	Markin	85	120	94	152	102	Audio OF	157	119	Audio ON
7	15	23	31	39	Cube	55	PGM4 -A: CopyEve	PVW8	Next Cut	87	124	95	156	103	Solo	159	111	119

[REC] Sta [Fade] Set [PGM4] A [MoveEve [PVW2] Pr [Events7] [PVW11] [Next] Set [105] Ove [118] Over [131] Ove [144] Ove [157] Sele [PTZ
[Replay-R [Cube] Se [PGM5] A [PGM11] [CopyEve [CopyEve [SelectNe [Next] Set [106] Ove [119] Over [132] Ove [145] Ove [158] Sele [PTZ
[MulREC] [Zoom] S [Replay-A [CopyEve [Events4] [CopyEve [PVW12] [Next] Set [107] Ove [120] Ove [133] Ove [146] Ove [159] Sele [Aud
[RE-PalyS [Wipe] Set [Replay-A [Events1] [Events5] [MoveEve [PalyPre] [Next] Set [108] Ove [121] Ove [134] Ove [147] Ove [160] Sele [Sol
[LIVE] Sta [Slide] Se [PGM6] A [MoveEve [CopyEve [PVW6] Pr [TAKE] Tr [REstar] R [109] Ove [122] Ove [135] Ove [148] Ove [161] Sele
[RE-Chan [Stinger1] [PGM7] A [Events2] [PVW3] Pr [Events8] [CUT] Cut [PlayPaus [110] Over [123] Ove [136] Ove [Audio OF [Zomm-st
[RplayPa [TAKE] Tr [Replay-B [PGM12] [MoveEve [PVW7] Pr [PalyNext [Prev] Pre [111] Over [124] Ove [137] Ove [Solo] Sol [Zomm-st
[LIVE] Sta [PGM1] A [Replay-B [CopyEve [CopyEve [PVW8] Pr [Next] Ne [Next] Ne [112] Over [125] Ove [138] Ove [Audio] A [TITLE1]
[FULLSC [PGM2] A [PGM8] A [PVW1] Pr [MoveEve [PVW9] Pr [Next] Set [RE-recSt [113] Over [126] Ove [139] Ove [Audio] A [TITLE2]
[Mix] SetT [CUT] Cut [Replay-B [MoveEve [Events6] [First] Re [Next] Set [101] Ove [114] Over [127] Ove [140] Ove [Audio] A [Zomm-st
[Zoom] S [PGM3] A [PGM9] A [CopyEve [PVW4] Pr [Last] Re [Next] Set [102] Ove [115] Over [128] Ove [141] Ove [154] Sele [Zomm-st
[STAREX [Replay-A [PGM10] [Events3] [PVW5] Pr [PVW10] [Markin] [103] Ove [116] Over [129] Ove [142] Ove [155] Sele [WIDE1] P
[Wipe] Set [Replay-A [Replay-B [MoveEve [MoveEve [SelectPr [MarkOut] [104] Ove [117] Over [130] Ove [143] Ove [156] Sele [WIDE2] P

进口 出口 保存图形 申请 关闭

第三步：激活剂 选择进口 导入配置文件

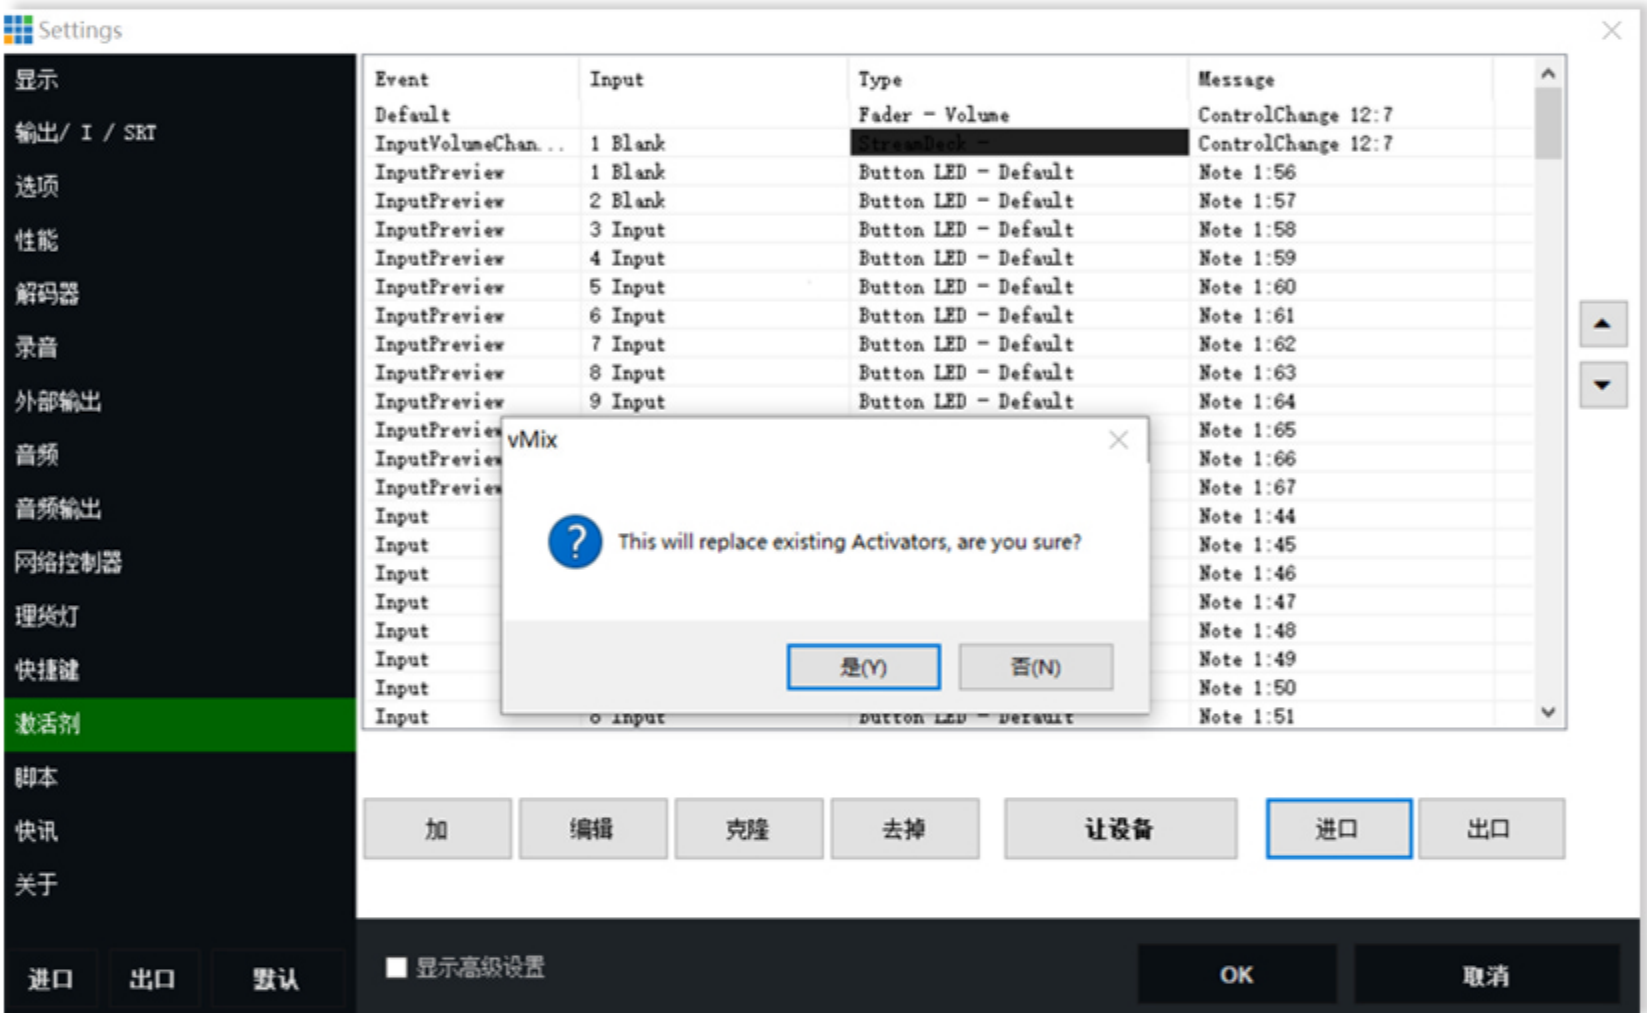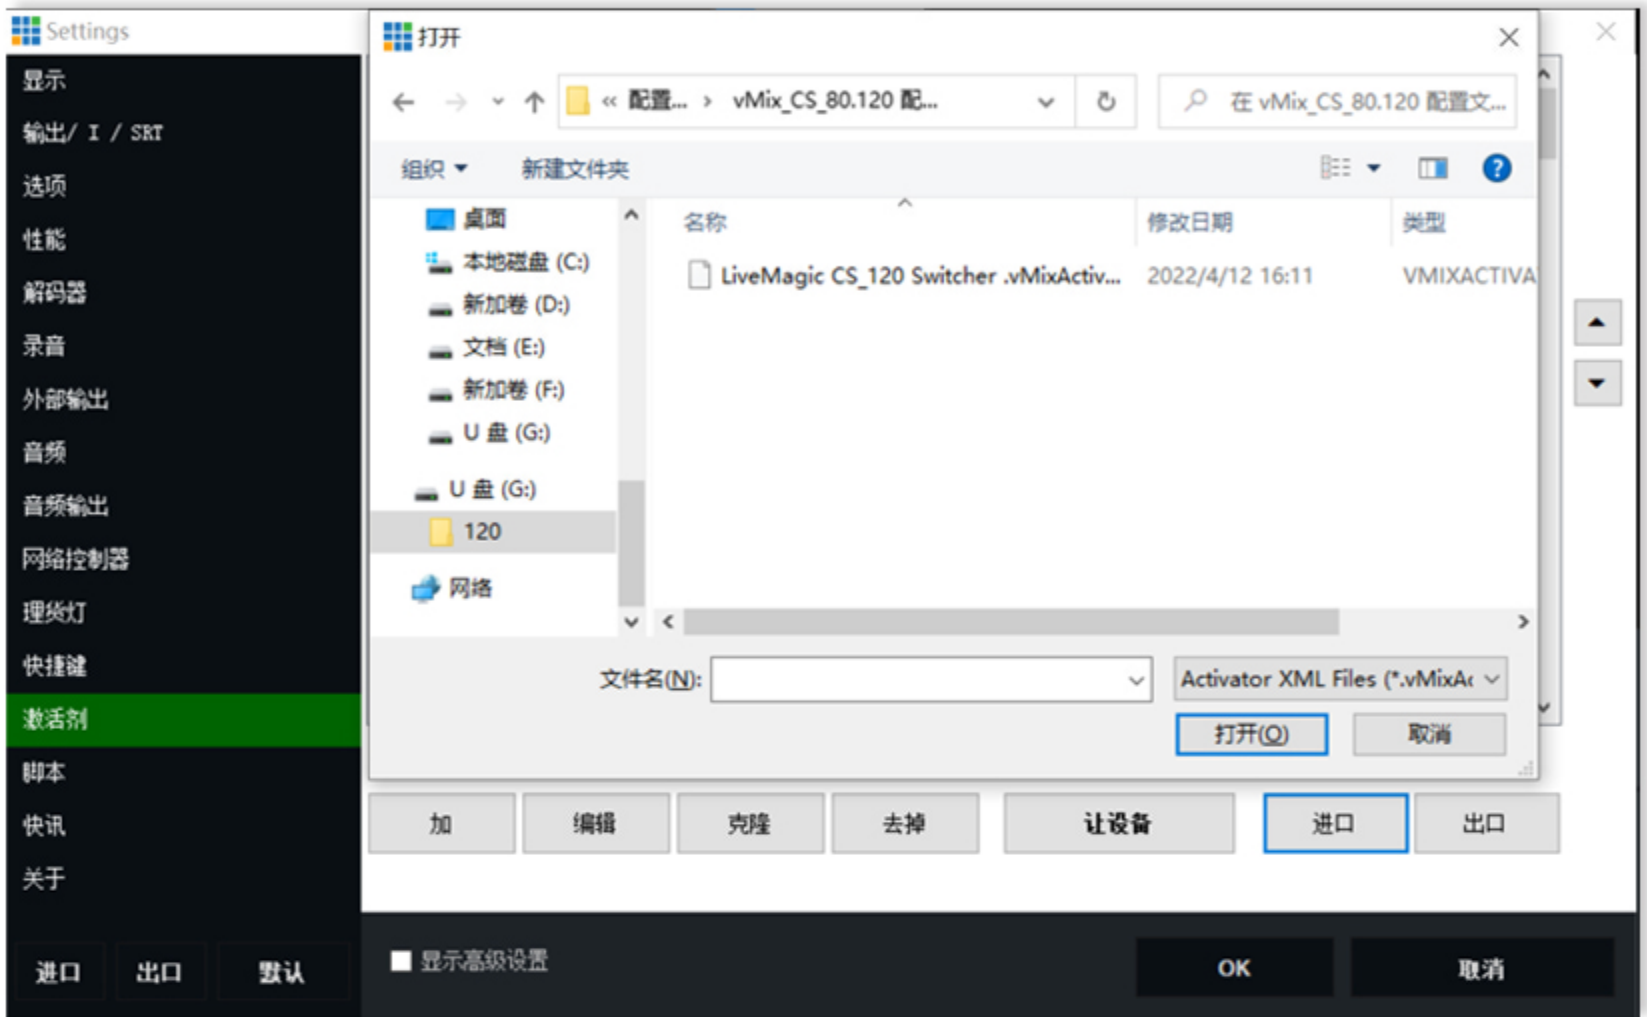

第四步: 第一次安装键盘, 需要依次点击快捷键和激活剂中的MIDI设置, 在弹出的对话框中选中新增的设备。

