





# PUSH BUTTON SERIES

## 8.5x8.5 Push Switch

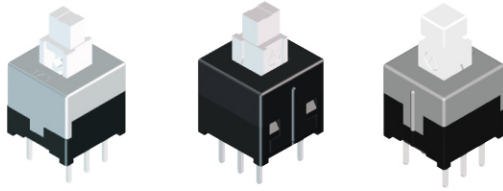

### HOW TO ORDER

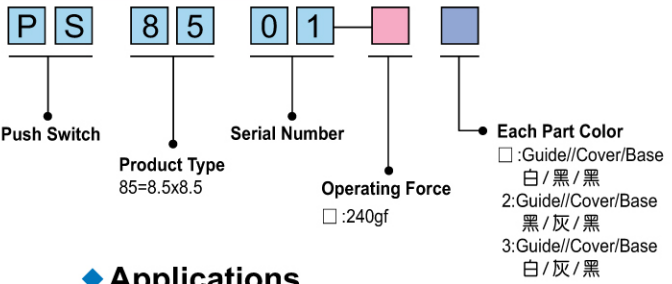

### ◆ Features

- Through hole type
- Self-Latching or Non-Latching function
- Non-latching type with silent pushing is available
- Double pole double throw
- Compact size of 8.5x8.5mm

### ◆ Applications

- Automotive interior lighting
- Computer peripherals
- Appliances
- Consumer electronics

### ◆ SPECIFICATION

Items		Standard
Operating temperature range		-30 ℃ to +85 ℃
Electrical performance	Rating	10mA, 30V DC
	Insulation resistance	100MΩ min. 500V DC
	Dielectric strength	500V AC for 1 min.
	Contact resistance	100mΩ max.
Durability	Lifetime	10,000 Cycles min.
Operating force		240gf

### ◆ DIAGRAM

No.	Dimensions	Circuit Diagram PCB Layout								
1	<p>● PS8501</p> <table border="1"> <tr><td>PS8503</td><td>Push No Sound No Lock(无声无锁)</td></tr> <tr><td>PS8502</td><td>Push No Lock(无锁)</td></tr> <tr><td>PS8501</td><td>Push To Lock(自锁)</td></tr> <tr><td>PartNo(料号)</td><td>Operating Type(操作类型)</td></tr> </table>	PS8503	Push No Sound No Lock(无声无锁)	PS8502	Push No Lock(无锁)	PS8501	Push To Lock(自锁)	PartNo(料号)	Operating Type(操作类型)	
PS8503	Push No Sound No Lock(无声无锁)									
PS8502	Push No Lock(无锁)									
PS8501	Push To Lock(自锁)									
PartNo(料号)	Operating Type(操作类型)									
2	<p>● PS8504</p> <table border="1"> <tr><td>PS8506</td><td>Push No Sound No Lock(无声无锁)</td></tr> <tr><td>PS8505</td><td>Push No Lock(无锁)</td></tr> <tr><td>PS8504</td><td>Push To Lock(自锁)</td></tr> <tr><td>PartNo(料号)</td><td>Operating Type(操作类型)</td></tr> </table>	PS8506	Push No Sound No Lock(无声无锁)	PS8505	Push No Lock(无锁)	PS8504	Push To Lock(自锁)	PartNo(料号)	Operating Type(操作类型)	
PS8506	Push No Sound No Lock(无声无锁)									
PS8505	Push No Lock(无锁)									
PS8504	Push To Lock(自锁)									
PartNo(料号)	Operating Type(操作类型)									
3	<p>● PS8507</p> <table border="1"> <tr><td>PS8509</td><td>Push No Sound No Lock(无声无锁)</td></tr> <tr><td>PS8508</td><td>Push No Lock(无锁)</td></tr> <tr><td>PS8507</td><td>Push To Lock(自锁)</td></tr> <tr><td>PartNo(料号)</td><td>Operating Type(操作类型)</td></tr> </table>	PS8509	Push No Sound No Lock(无声无锁)	PS8508	Push No Lock(无锁)	PS8507	Push To Lock(自锁)	PartNo(料号)	Operating Type(操作类型)	
PS8509	Push No Sound No Lock(无声无锁)									
PS8508	Push No Lock(无锁)									
PS8507	Push To Lock(自锁)									
PartNo(料号)	Operating Type(操作类型)									

PUSH BUTTON